


JULIAN CHICHESTER

BAY BOOKCASE LEFT ASSEMBLY INSTRUCTIONS

NO.	ITEM	DESCRIPTION	QTY
1		Bolt M6*30mm	3
2		Washers	3
3		Screw Drive	Not Included
4		Steel Bolt M4*20mm	2
5		Steel Bracket	2
6		Wall Plug	2
7		Steel screw M4*30mm	2
8		Flat washer Ø6	2
9		Spring washer Ø6	2

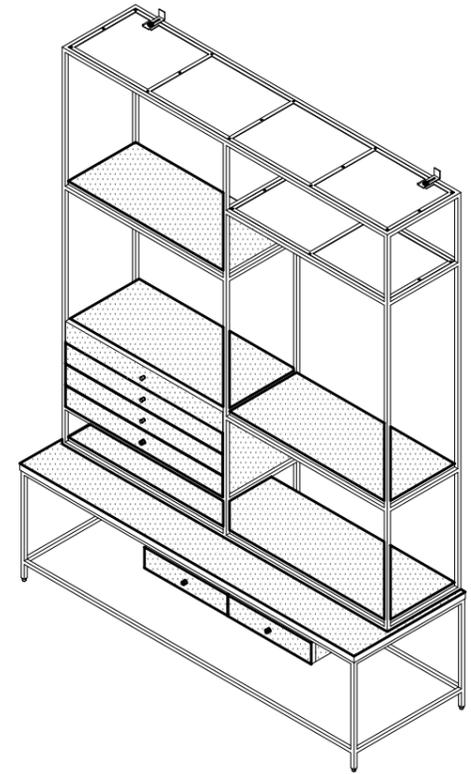

BAY BOOKCASE LEFT, PBV - FMT - SYC

Step 1: - With the connecting bolts (1) and washer (2) attached to the bookcase, Using Screw Drive (3) to assemble the top and base of the bookcase.

WARNING

* PLEASE FIT THE BRACKETS PROVIDED TO THE TOP OF THE CABINET AND AN ADJACENT WALL.
* THIS IS TO PREVENT THE CABINET FROM TIPPING FORWARD IN SOME CIRCUMSTANCES.


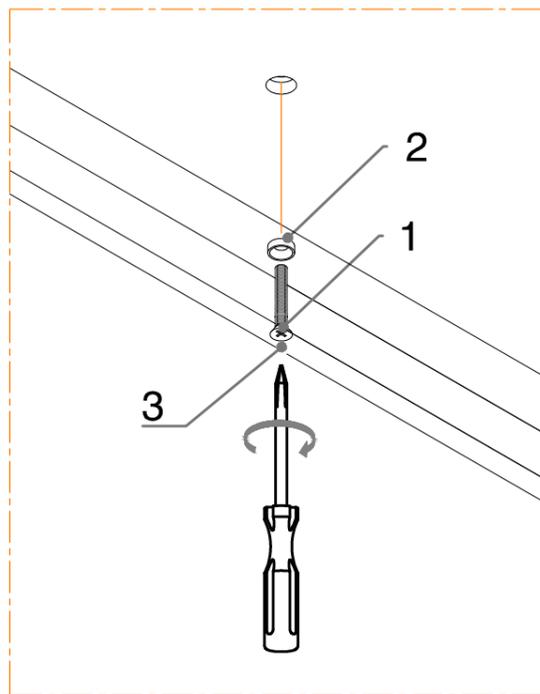


FIGURE 1

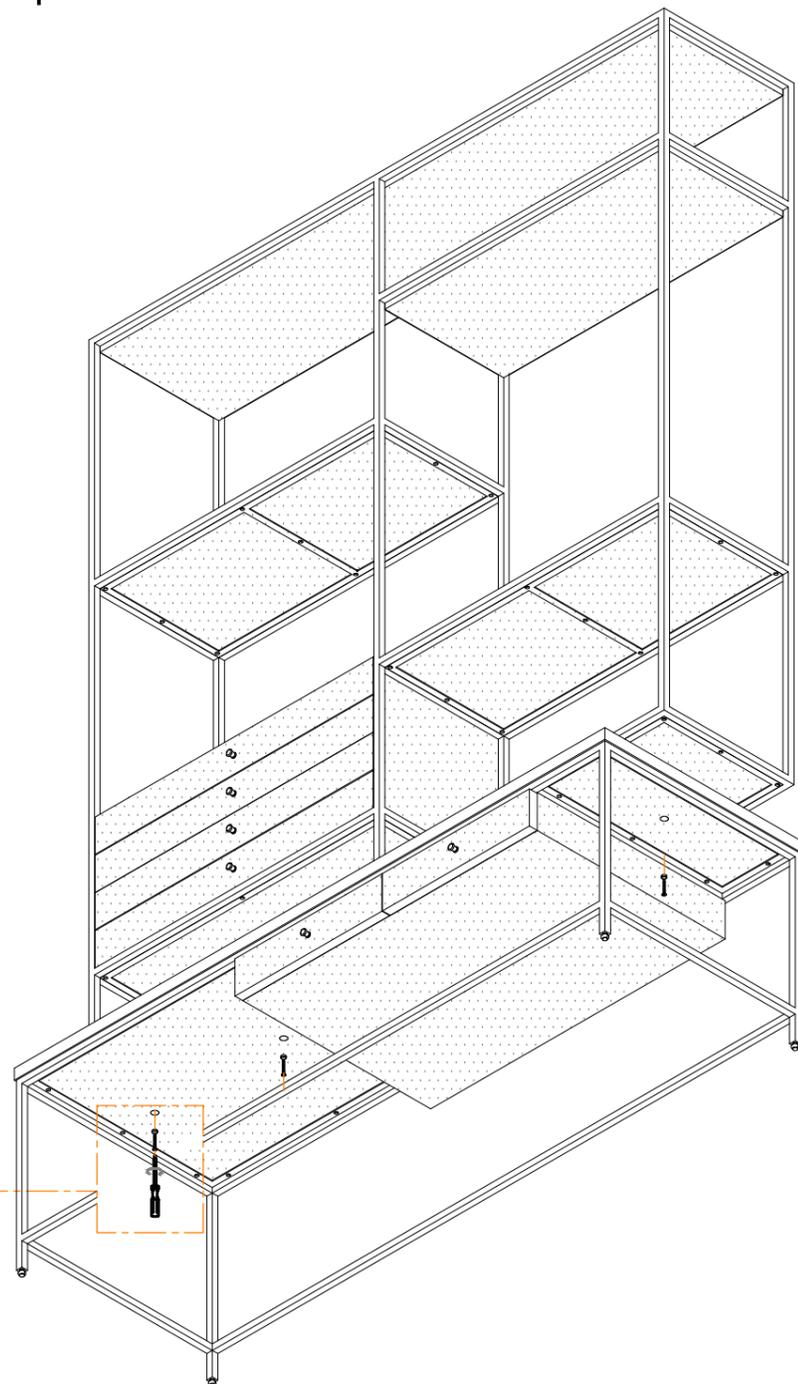

High Point

1120 Bedford Street, High Point, NC 27263




Office +1(336) 886 2454 @jchichesterusa

sales@julianchichesterusa.com

julianchichester.com

BAY BOOKCASE LEFT ASSEMBLY INSTRUCTIONS

- Step 2:** - With the brackets(5) attached to the top of bookcase, position the bookcase where it will finally stand and mark where the holes for wall plugs (6) will be.
- Detach the brackets from the bookcase.
 - Drill two 8mm diameter holes where was marked in the wall and insert the wall plugs.
 - Install the brackets into the wall using screw (7).
 - Position the bookcase with the wall brackets then attach the brackets into the bookcase using washers (8), (9) and bolt (4).

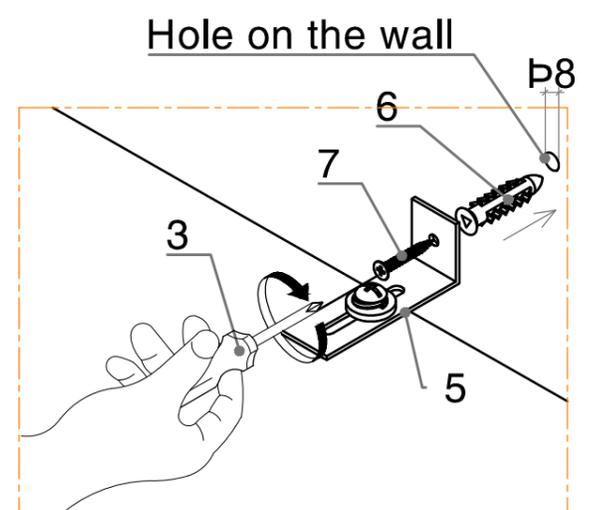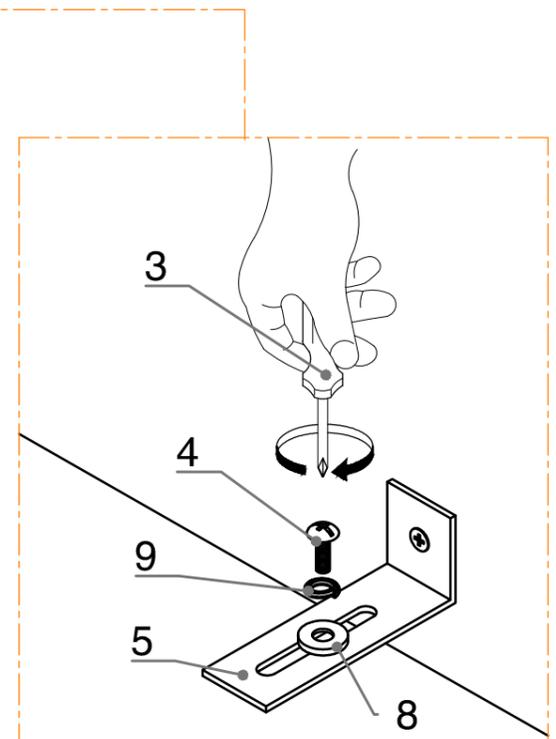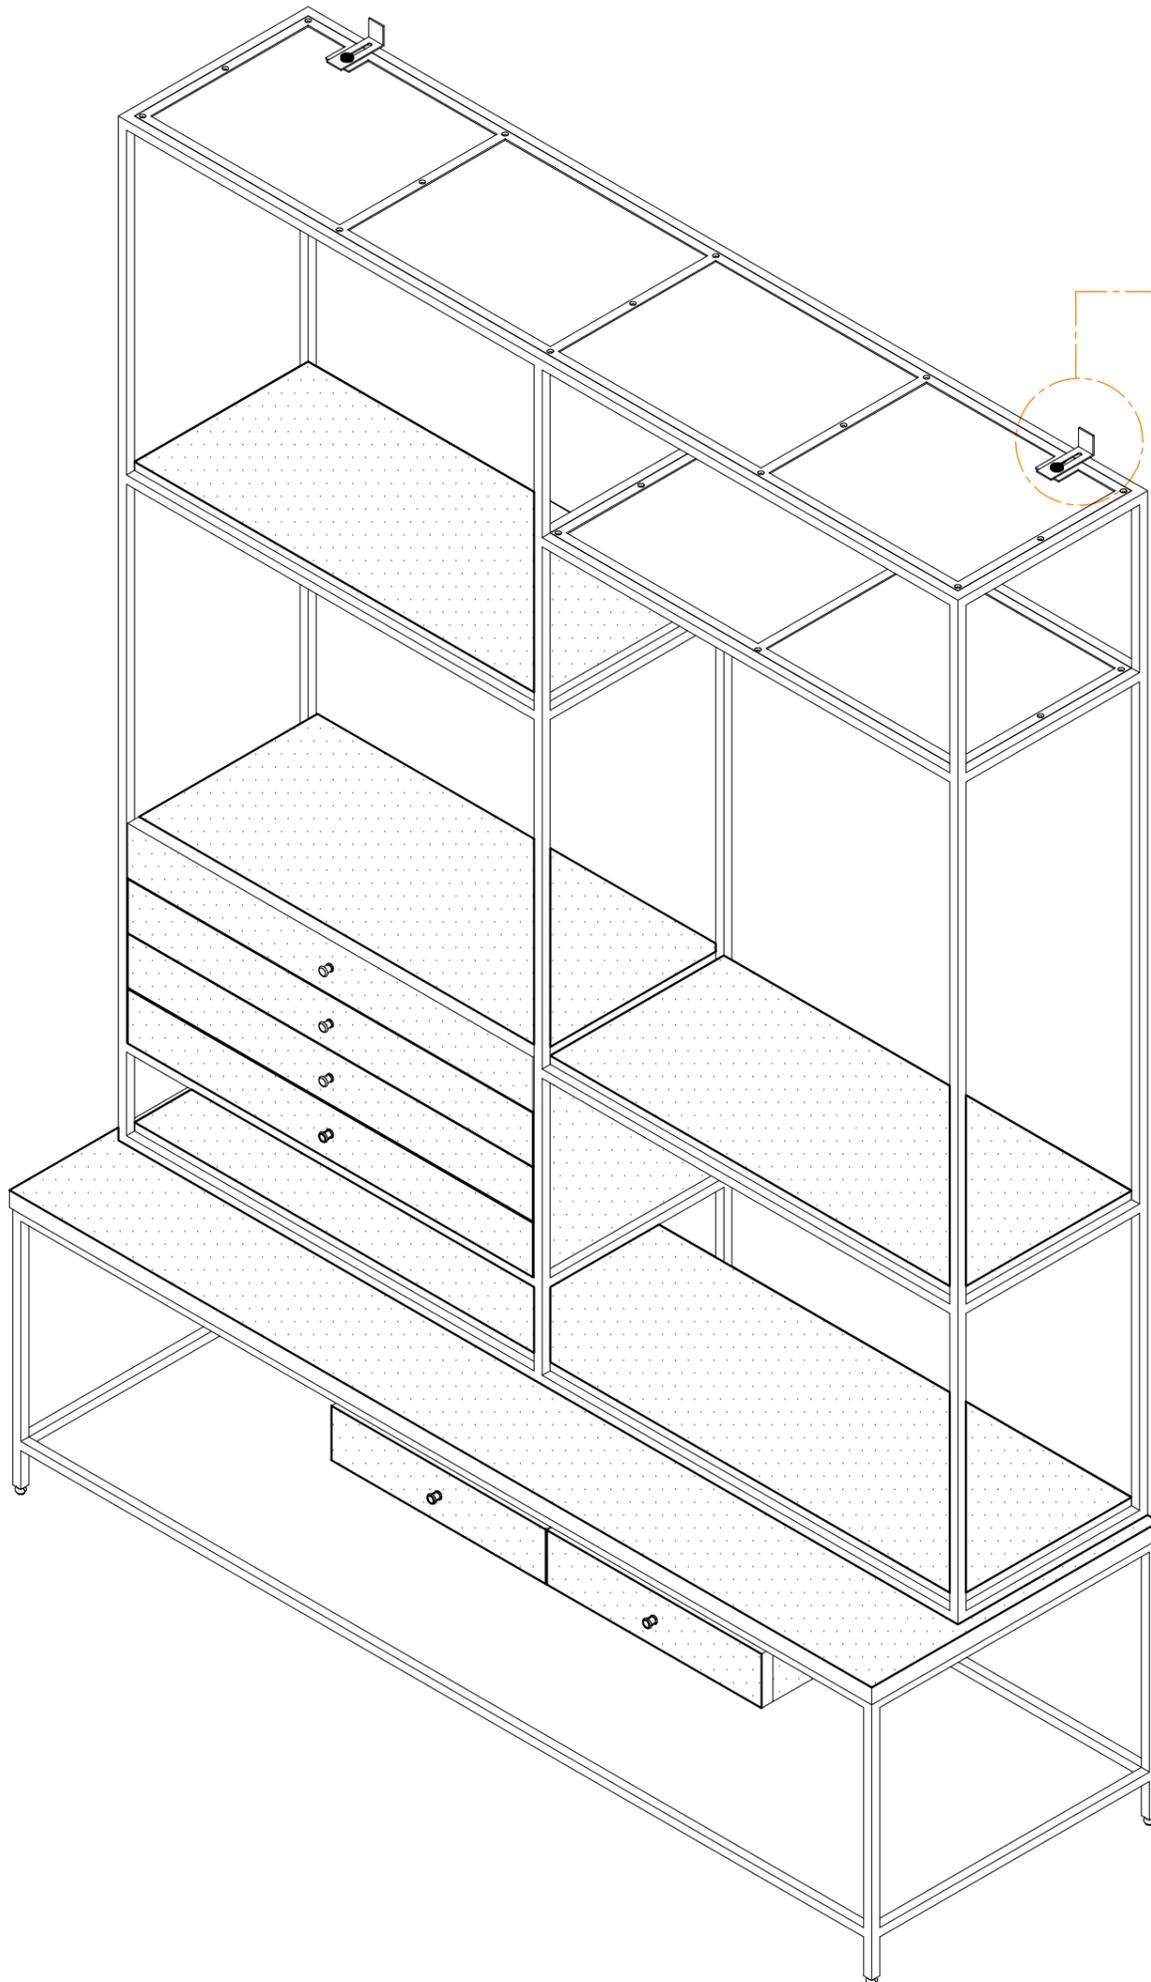

High Point

1120 Bedford Street, High Point, NC 27263

Office +1(336) 886 2454 @jchichesterusa

sales@julianchichesterusa.com

julianchichester.com